PNWBemani.net - Articles - Business Card Trick - DDR Community Forum

	Unread PMs Profile Lo
Bemani.net » Forum » Articles » Arcade Machine Ma	<u>iintenance</u>
Edit Delete	<u>MyArticles</u> <u>Search</u>
Business Card 1	Trick
Submitted By: <u>Suko</u> Date: December 02, 2010, 11:33:21	AM Views: 3594
Summary: Learn how to use a business card to dance pad.	eatest tricks one can know when
maintenance a LILR machine The simple dilick	easy and best of all chean
maintenance a DDR machine. It's simple, quick, Here's what you'll need:	, easy, and best of all, cheap!
Here's what you'll need: - Screwdriver (Philips if it's a DDR machine, Hex - Business cards/cardstock	

simple. In the game's service menu, go to the I/O test (where you can test the pad inputs). All machines have a slightly different interface for this test, but generally speaking, it should show you when one or more of the sensors within a specific arrow are activated. Once you understand the information on the Input screen, we can begin.

First, let's begin with the arrow that you suspect is the culprit. With the toe of your shoe, or your thumbs, press down on the panel where each sensor is located. This would be the top, bottom, left, and right edges of the arrow panel. Press down on each sensor, one at a time. When you do this, notice how much pressure you have to exert before the pads light up or the machine registers the input. After you have done this to all four sensors, does a certain sensor feel "weak" to you? If so, then that is probably the sensor that needs help.

PNWBemani.net - Articles - Business Card Trick - DDR Community Forum

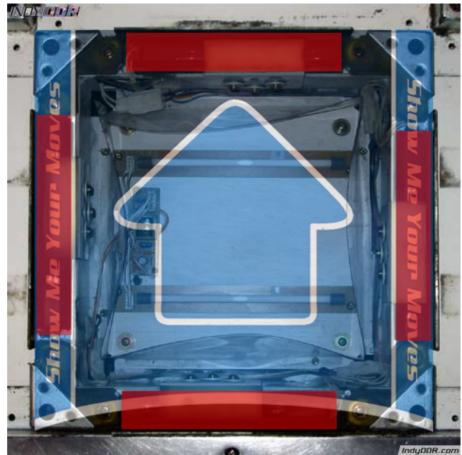


Image showing where the sensors are (in red), relative to the arrow panel. This is typical for most 4 panel dance games.

Step 2: Identifying the Problem

Now that you've identified the unresponsive sensor, it's time to get to work.


Access the arrow cavity be unscrewing the brackets and removing the arrow panel. Once that's done, pull the weak sensor out from it's housing (keep the wires connected). Hold the sensor between your thumb and index finger and squeeze it in the middle. Does it activate? How hard are you having to push it? If it doesn't activate at all, your sensor is dead and you have to replace it. If, however, it is still activating when you squeeze it, then there's hope.

Keep in mind that if your sensor still works, but it takes a lot of pressure to activate it, the business card trick might not be enough to make it functional again. In this case, you should replace that sensor with a new one.

Step 3: The Business Card Trick

Here we go! Let's get that sensor operational again!

Take a business card and fold it over in thirds along the length of the card. Take the folded card and place it under the sensor, inside the sensor cavity.

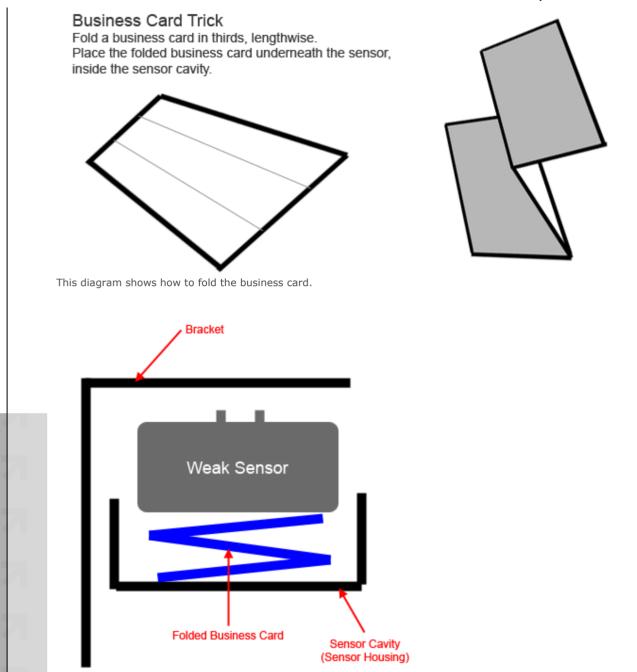

This diagram shows how the folded card should be placed.

Do this for any sensors that might be weak or unresponsive for that arrow/pad and give it another test. Hopefully the pads will be much more responsive.

Step 4: Explanation and Warnings

This trick works by adding some pressure to the bottom of the sensor. Then, when the player presses down on the arrow panel, it requires less force to activate the sensor, because of the business card pushing on it from underneath.

In some cases, having a full business card folded underneath a sensor might make it too sensitive, which will lead to "ghost stepping". This is when the sensor will activate, even when nothing seems to be hitting it. If you're having this issue with an arrow you did the business card trick on, you should take out the full business card and use half a business card instead. Conversely, in some instances where the sensor is very hard to activate, it might be necessary to use more than one business card to get it working properly again.

